

Installing your Illuminado image is simple!



1. Carefully clean area to which your Illuminado image will be applied. Be sure to remove all traces of dirt & grime, especially around the edges. Double check your window size and cut your film to that size


2. IMPORTANT: Do the next step with film ON A TABLE sprayed with water. Slowly peel off the backing to your film leaving the sticky side UP. With a solution of approximately 18 drops detergent per 32 oz of water, spray your film as you peel. Be careful when peeling backing so image doesn't fold over on itself.

3. The water sprayed on your table keeps your film from sliding as you peel the backing off. Thoroughly spray glass surface to which image will be applied with your solution. The wetter the better


4. Using same solution, spray your cleaned window completely, leaving no area unsprayed. This solution gives flexibility when placing film on glass, allowing you to slide the image around to the proper position.



6. The next steps are the most tricky, but quick to learn. Upon placing your image on the glass, and sliding it into position, you will want to tack your film into place to secure it up top. Simply squeegee a small section of your film, up top (Diagram A). Start with minimal pressure, then add more pressure as more air and bubbles are pushed out. You may need to keep spraying the front of your film to help squeegee easier. This helps to avoid creases in the material as you work. Next, squeegee a path (B) down the center of your film, from top to bottom. The image sometimes has a tendency to bunch up a little, this is normal, and easily fixable by pulling the image slightly as you work, going all the way to the outer edge isn't necessary. You are generally left with a gap around the film of 1/8" which is easily filled in later with your lead tape (or if applicable, with moulding or caulk). Following the directions of the arrows, complete your squeegee work by doing the sides. The most important thing is to take your time and be extra cautious on the first windows

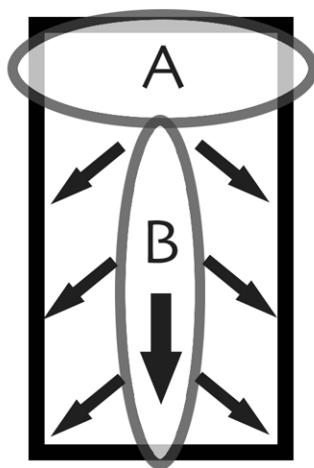

5. Carefully transport your film sticky sprayed side away from you to your wet window. Walk carefully enough to keep the film steady, which makes the next step easier

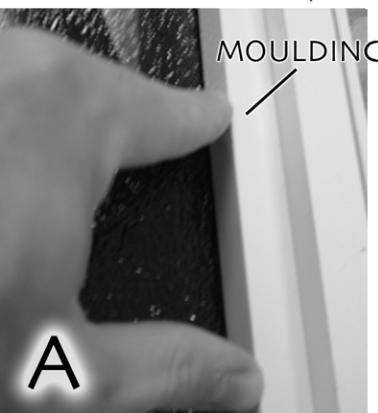

MOULDING

Lead tape: Stick to film and glass

Tools needed:

Scissors, Tape Measure, razor blade, window cleaner such as windex, squeegee, spray bottle, liquid dish detergent, paper towels.

REMEMBER: Choose install time that isn't too hot or cold

Make sure all areas of glass and image are wet before placing it on glass

Seaming: in RARE instances (due to size constrictions) your image will come in more than 1 piece. A but-joint type seam is accomplished by overlapping film at one of the leadlines in the design, making the seam nearly invisible. 99% of the time, this will not be an issue.

ANY QUESTIONS? CALL 1-800-291-3739

7 (a) If applicable, install moulding around edges. This is highly recommended. (b) If you don't have moulding, we can supply you with lead tape (extra cost) to be installed when image is COMPLETELY DRY along the edges to give a finished look. (c) or you may carefully caulk around the edges of the image when it is dry. IMPORTANT (B & C) your lead tape or caulk will act mainly to fill in any gap between the edge of the film and the frame. This is only for giving the film a finished look, the film doesn't need any of this to stay stuck down. We recommend the tape over caulk as it's less messy.